




1

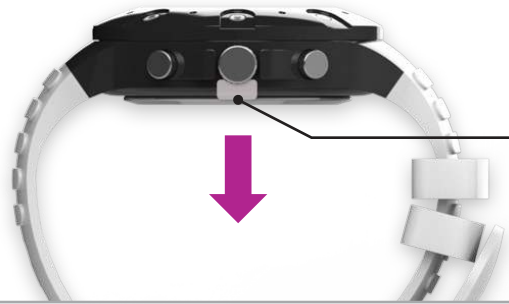

Remove the clip before use

Entfernen Sie den Clip vor dem Einsatz

Verwijder de clip voor gebruik

Retirer le clip avant utilisation

2



USB



✓ incl.

For additional powerbank and battery solutions visit [www.DiscoJewels.com](http://www.DiscoJewels.com)  
 Für weitere Powerbank und Batterielösungen besuchen Sie [www.DiscoJewels.com](http://www.DiscoJewels.com)  
 Voor extra powerbank en batterijoplossingen bezoek [www.DiscoJewels.com](http://www.DiscoJewels.com)  
 Pour des solutions supplémentaire de powerbank et batterie visitez [www.DiscoJewels.com](http://www.DiscoJewels.com)

3



1x  
± 60min.

2x  
± 360min.

3x  
± 180min.

4x  
± 120min. \*

\* Depending on the Audio Intensity

\* Abhängig von der Audiointensität

\* Afhankelijk van de geluidsintensiteit

\* En fonction de l'intensité sonore



auto-standby after 15min.

Time 2 Party



Collect your favorite color straps  
 •  
 Sammeln Sie Armbänder in Ihren Lieblingsfarben  
 •  
 Verzamel je favoriete kleur horlogebandjes  
 •  
 Collectionnez vos couleurs préférées des bracelets de montres



Free PartyFunLights App



