PROUSER

POWER BANK 10000mAh





CONTENTS

Product Description	3
Packing list	3
Technical description	4
General Information	5
Safety	5
Usage	6
Product Specification	9
Ileaning and Maintenance	g
Warranty	10
Disposal	10
EU Declaration of Conformity	11

Product Description






1 X USB-Type-C / USB 3.0 Cable 1 x User Manual

— 3 —

User

Manual

Technical Description

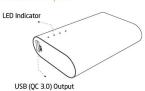

0



QC stands for quick charge PD stands for power delivery

To find out whether your terminal device supports QC and / or PD, please refer to the product information or operating instructions of the device manufacturer or the information available on the Internet.

This manual contains information on how to use the power bank and about personal safety when using it. Please carefully read and understand all the instructions before use. Failure to follow all instructions and warnings may result in fire, electric shock or other inlust or damana.

all instructions and warnings may result in fire, electric shock or other injury or damage. Please retain the instruction leaflet within this pack for advice on how to safely use and maintain the product and forward it to other users. Pro-User accepts no liability for direct or indirect damage caused by faulty assembly or connection, a faulty usage, a usage of altered units or units that are known as damaged, a usage for purposes other than described and especially caused by failure to follow these instructions.

Electrical devices are not toys. Keep the product away from c hildren.

Only use the product as intended and for purposes described in

Only use the product as intended and nor purposes abscribed in the manual.
 After opening the package, examine all parts for visible damage. If you have found any damage, please contact the company you purchased this unit from.
 On ont throw, tap or shake the product.
 Do not attempt to disassemble the product.

Do not overcharge the product or allow the battery to completely

___ 5 __

- Up not overcharge the product or allow the battery to complicatischarge.
- When stored over a long period of time, batteries should be charged regularly (at least every three months).
- The power bank must not be charged and discharged at the same time!
- Never dispose of the power bank in a fire because they may explode.

OR S. **SO**

- Please do not attempt to charge the product with battery exposed or case broken, and do not charge the product that are incompatible with this product.
- Avoid storing, charging or using batteries in extreme temperatures.

when charging, the environment temperature shall not be more than 40°C.

Use the Type-C cable supplied to charge the power bank from an AC adapter's USB, or from any other USB resources.

2. Charge the Power Bank fully before using it for the first time.


3.In order to obtain the maximum charging power, it is recommended to use a PD charger with Type-C to Type-C cable.

Charging the power bank

Charging other devices using the power bank:

- Connect one end of the original Type-C cable with your smart phones or digital device, and the other end of cable with the power bank. Charging will commence automatically.
- 2. The power bank can charge two devices at the same time.
- 3.This power bank supports Fast Charging and is suitable for QC or PD compatible devices for optimized charging. That means the charger recognizes the connected terminal device and supplies it with the optimal current to minimize charging time.
- 4.To stop charging, you can press the power button twice. Or simply pull out the charging device, then the product will stop working after around 35s.

When discharging, the LED indicator will be short-lived on, then off. Simply press the power button once to know the remaining capacity whenever needed.

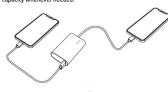

Mode	Indicate Lights
Self-charging	Complete charged: always on Charging: flashing
Discharging	Short-lived on, then always off
Capacity status	No power: always off Full power: short-lived on Less power: flashing

1.Only use suitable charging devices or USB connections for charging.

2.Never connect the charging cable of the Power Bank to both the input and output at the same time. This could damage the battery.

3.Do not connect any terminal devices while the Power Bank is charging. This could damage the Power Bank and the connected device.

--- 8 ---

Mode	Indicate Lights
Self-charging	Complete charged: always on Charging: flashing
Discharging	Short-lived on, then always off
Capacity status	No power: always off Full power: short-lived on Less power: flashing

Product Specification

Mode	Indicate Lights
Self-charging	Complete charged: always on
	Charging: flashing
Discharging	Short-lived on, then always off
Capacity status	No power: always off
	Full power: short-lived on
	Lass server Oashing

Size: approx. 24.5*62*80mm
Color Available: black, silver, red, blue
Charging cable: Length approx. 300mm, Type-C to USB cable
Material: Akunium alloy + ABS
Input (Type-C PD): DC SV/3A, SV/2A, 12V/1.5A
Output 1 (Type-C PD): DC SV/3A, SV/2A, 12V/1.5A
Output 2 (QC 3.0): DC SV/3A, SV/2A, 12V/1.5A
Max. Output Power: 18W
Capacity: approx. 10,000mAb
Working temperature: 1.0° to 4.0 °C
Electrical Safeguards: Protection against: overheat, overcharge, overcurent

This product may be operated in EU countries



- Please keep the product dry. If the product is wet, please use a Prease keep the product only. If the product is well, please use a soft cloth to wipe it clean as soon as possible.

Please use the clean, soft and dry cloth or brush to clean the surface of the product.

When not in use, please store the product in a dry environment and protect it from direct sunlight, heat and moisture.

— 9 —

Warranty

Pro-User warrants this product for a period of 12 months from the date of purchase to the original purchaser. Warranty is not transferable. Warranty covers defect against workmanship and materials only. To obtain warranty service, please return the unit to the place of purchase or authorized Pro-User dealer together with your proof of purchase. The warranty is void if the product has been damaged or not used as described in this manual. Warranty is void if a non-authorized repair has been performed. Pro-User makes no other warranty expressed or implied. Pro-User is only responsible for repair or replacement (at Pro-User's Discretion) of the defective product and is not responsible for any consequential damage or inconvenience caused by the defect.

Disposing of the packaging Sort the packaging before you dispose of it. Please dispose different packaging materials in a correct way.

Disposing of the product unsposing or the product.

The product is classed as Electrical or Electronic Equipment and should not be disposed of with other household or commercial waste at the end of its working life. Please recycle where facilities exist. Ask your local authority or retailer for recycling advice.

-10-

EU Declaration of Conformity



---11-

PRO USER

POWER BANK 10000mAh Modeli: 20158-Schwarz, 20159-Silber, 20160-Rot, 20161-Blau Max. Output Power: 18W Batch: AP/09 www.pro-user.com



德文 50x75mm



POWER BANK 10000mAh



CE 🗵

INHALT

Produktbeschreibung 3
Lieferumfang 3
Technische Beschreibung 4
Allgemeine Informationen 5
Sicherheit 5
Verwendungszweck 6
Produktspezifikation9
Reinigung und Instandhaltung 9
Garantie 10
Entsorgung 10
FUl-Konformitätserklärung 11

Produktbeschreibung -- Lieferumfang

@ 6






1 X USB-Typ-C / USB 3.0-Kabel 1 x Benutzerhandbuch

--- 3 ---

Technische Beschreibung LED-Anzeige

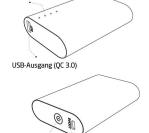

Ein- / Ausschalter Typ-C (PD 3.0) Eingang / Ausgang QC steht für Schnellladung PD steht für Power Delivery

Um herauszufinden, ob Ihr Endgerät QC und / oder PD unterstützt, beachten Sie bitte die Produktinformationen oder die Bedienungsanleitung des Geräteherstellers.

— 4 **—**

Allgemeine Informationen

Dieses Handbuch enthält Informationen zur Verwendung der Power Bank und zu Ihrer Sicherheit beim Gebrauch. Nehmen Sie sich Zeit und lesen Sie die folgenden Anweisungen und Hinweise zumächst ganz durch. Die Nichtbeachtung der Anweisungen und Warnungen kann zu Bränden, Stromschlägen oder andreen Verletzungen oder Schäden führen. Bewahren Sie diese Bedienungsanleitung anschließend an einem sicheren Ort auf und geben Sie sie an andere Nutzer des Gerätes weiter.

weiter.
Pro-User übernimmt keine Haftung für direkte oder indirekte Schäden, die durch fehlerhafte Montage oder Verbindung, fehlerhafte Vervendung, Versindaretre oder als beschädigt bekannter Geräte, Verwendung zu anderen als den beschriebenen Zwecken und insbesondere durch Nichtbeachtung dieser verursacht werden.

- Elektrische Geräte sind kein Spielzeug. Halten Sie das Produkt vo
- Elektrische Geräte sind kein Spielzeug, Halten Sie das Produkt von Kindern fern.
 Verwenden Sie das Produkt nur bestimmungsgemäß und für die in der Bedienungsanieltung beschriebenen Zwecke
 Überprüfen Sie nach dem Öffnen der Verpackung alle Teile auf sichtbare Schäden. Wenn Sie einen Schaden gefunden haben, wenden Sie sich bitte an die Firma, von der Sie dieses Produkt gekauft haben.
- gekaurt naben. Das Produkt nicht werfen, klopfen oder schütteln. Versuchen Sie nicht, das Produkt zu zerlegen. Vermeiden Sie ein überladen des Produktes sowie eine Tiefenentladung des Akkus.
- neuenennauung des Akkus.

 Bei längerer Lagerung sollten die Batterien regelmäßig
 aufgeladen werden (mindestens alle drei Monate).
 Die Power Bank darf nicht gleichzeitig geladen und entladen
 werden!

Werfen Sie die Power Bank niemals in ein Feuer, da sie explodieren kann.

- explodieren kann.
 Versuchen Sie nicht, das Produkt mit freiliegendem Akku oder einer gebrochenen Hülle aufzuladen und laden Sie keine Produkt, die nicht mit diesem Produkt kompatibel sind. Vermelden Sie es, Batterien bei extremen Temperaturen zu
- lagern, aufzuladen oder zu verwenden. Während des Ladevorgangs darf die Umgebungstemperatur 40°C nicht überschreiten.


Verwendungszweck

Aufladen der Powerbank:

1.Verwenden Sie das mitgelieferte Typ-C-Kabel, um die Power Bank aus einem USB Anschluss eines Netzteils oder von anderen USB-Ressourcen zu laden.

2.Laden Sie die Power Bank vor dem ersten Gebrauch vollständig

Um die maximale Ladeleistung zu erhalten, wird die Verwend eines PD-Ladegeräts mit Typ-C-zu-Typ-C-Kabel empfohlen.

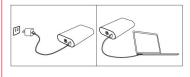

— 6 —

- 1.Schließen Sie ein Ende des USB Type-C Kabels an Ihre Smartphone oder ein anders digitale Geräte an und das andere Ende des Kabels wird mit der Powerbank verbunden. Der Ladevorgang beginnt automatisch.
- 2.Die Power Bank kann zwei Geräte gleichzeitig auflader
- 3.Diese Power Bank unterstützt Fast Charging und eignet sich für QC oder Plo-kompatible Geräte für opfiniertes Laden. Das helßt, das Ladegerät erkennt das angeschlossene Endgerät und versorgt es mit dem optimalen Strom, um die Ladezeit zu minimieren.
- 4. Um den Ladevorgang abzubrechen, können Sie entwerder den Netzschalter zweimal drücken oder das Verbindungskabel herausziehen. Nach einem Herausziehen des Kabels schaltet sich die Powerbank nach ca. 35s automatisch aus.

Während des Entladens leuchtet die LED-Anzeige nur kurz auf und erilscht dann. Drücken Sie einfach einmal die Ein / Aus-Taste, um die verbleibende Kapazität zu ermitteln wann immer nötig.



Indikatorstatus:

Modus	LED Lichter
Powerbank ist	Vollständig geladen: 4 LED Leuchten nach Betätigung des ON Knopfes Wird geladen: Blinken
	wild geladen: Billiken
Powerbank gibt Ladung ab	LED Lichter leuchten kurz auf und geht dann aus
	Nicht geladen: LED immer aus
Kapazitätsstatus	Voll geladen: LED leuchtet kurz auf
	Wenig Power: LED blinkt

/ WARNUNG

- Nerwenden Sie zum Laden nur geeignete Ladegeräte oder USB-Anschlüsse.
- 2.Schließen Sie das Ladekabel der Power Bank niemals gleichzeitig an den Ein- und Ausgang an. Dies könnte den Akku beschädigen.
- Schließen Sie keine Endgeräte an, w\u00e4hrend die Power Bank aufgeladen wird. Dies k\u00f6nnte die Power Bank und das angeschlossene Ger\u00e4t besch\u00e4digen.

--- 8 ---

Produktspezifikation

Größe: ca. 24,5 * 62 * 80 mm
Farbe erhäftlich: schwarz, silber, rot, blau
Ladekabel: Länge ca. 300 mm, Typ-C auf USP-Kabel
Materlai: Aluminiumlegierung * ABS
Input (Type-C PD): DC SW/3A, 9W/2A, 12W/1.5A
Output 1 (Type-C PD): DC SW/3A, 9W/2A, 12W/1.5A
Output 2 (QC 3.0): DC SW/3A, 9W/2A, 12W/1.5A
Max. Output Power: 18W
Capacity: ca. 10,000mAh
Arbeitstemperatur: -10 °C to 40 °C
Schutzmaßanheme; Kurzschlusssicherung Schutz ge
Überspannung und Überhitzung sicherung, Schutz gegen Dieses Produkt darf in EU-Ländern betrieben werder

Reinigung und Instandhaltung

- sauber.

 Verwenden Sie zum Reinigen der Produktoberfläche ein sauberes, weiches und trockenes Tuch oder eine Bürste.

 Bewahren Sie das Produkt bei Nichtgebrauch an einem trockenen Ort auf und schützen Sie es vor direkter Sonneneinstrahlung, Hitze und Feuchtigkeit.

Pro-User gewährt eine Garantie von 12 Monaten ab Kaufdatum. Die Garantie ist nicht übertragbar und deckt Herstellungs- und Materialfehier ab. Senden Sie das Gerät zur Inanspruchnahme des Garantieservices an die Verkaufsstelle oder den autorisierten Pro-User-Händier zusammen mit Ihrem Kaufnachweis. Die Garantie erlisischt wenn das Produkt beschädigt oder nicht wie in diesem Handbuch beschrieben verwendet wurde. Die Garantie erlisischt auch, wenn eine nicht autorisierte Reparatur durchgeführt wurde. Pro-User gibt keine andere ausdrückliche oder stillschweigende Garantie.

udrügerunt wuder, Fro-Ose got keine andere ausgabeitet und stillschweigende Garantie. Pro-User ist nur für die Reparatur oder den Ersatz (nach Ermessen von Pro-Users) des defekten Produkts verantwortlich und haftet nicht für Folgeschäden oder Unannehmlichkeiten, die durch den Defekt verursacht wurden.

Entsorgung

Verpackung entsorgen Sortieren Sie die Verpackung, bevor Sie sie entsorgen. Bitte entsorgen Sie die verschiedenen Verpackungsmaterialien ordnungsgemäß.

Produkt entsorgen Das Produkt ist als Elektro- oder Elektronikgerät eingestuft und darf am Ende seiner Lebensdauer nicht mit dem Haus- oder Gewerbemülle nicksorgt werden. Bitte nutzen is dei de örtlichen Einrichtungen zum Recyceln. Wenden Sie sich an Ihre örtliche Behörde oder Ihren Händler, um Informationen zum Recycling zu

EU-Konformitätserklärung



PROUSER®

POWER BANK 10000mAh Modell: 20158-Schwarz, 20159-Silber, 20160-Rot, 20161-Blau Max. Output Power: 18W Batch: AP/09 www.pro-user.com

C pro-user PROUSE

Seestrasse 19 83253 Rimsting Germany